

## Convertible D

### General:

The canvas top is secured with its front part at the top frame and with its rear part at the rear bow. The top is fastened to the body by the rear bow with two retaining brackets and by both bow ends (see fig. 68 and 70).

The top skeleton consists of top frame, main bow, rear bow and two intermediate bows, which are connected by guide arms.

Always make sure that the top fits and seals perfectly, in particular a Convertible D top. Rubber seals are provided at each top side and at the front, whose effectiveness should be regularly checked.

### Removing and Mounting Top

#### Removal:

1. Crank window panes down to stop or open both doors.
2. Unlock both top locks left and right at top frame.
3. Undo two hex. hd. bolts at either rear top bracket (see fig. 68).
4. Undo one Philips head screw at either padding of lateral top mounting (see fig. 69)
5. Undo 2 hex. hd. bolts at both lateral top mountings (see fig. 70).
6. Lift off top.

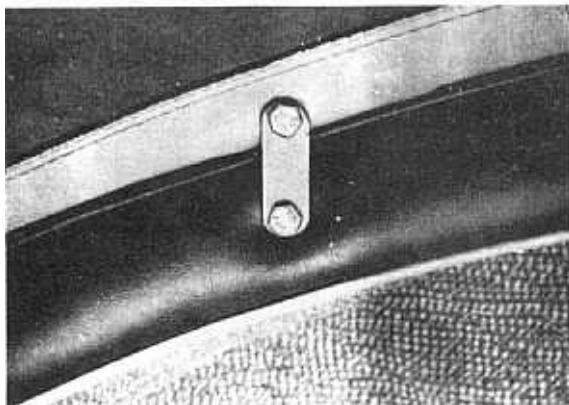


Fig. 68

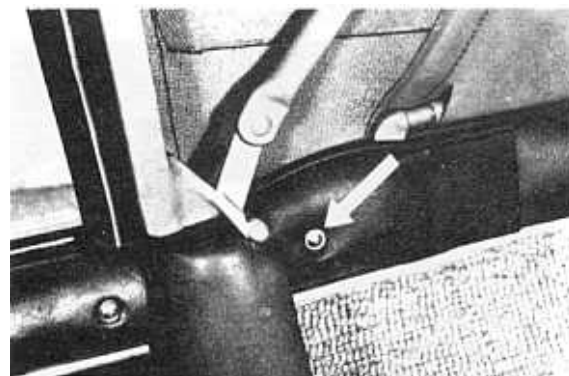


Fig. 69

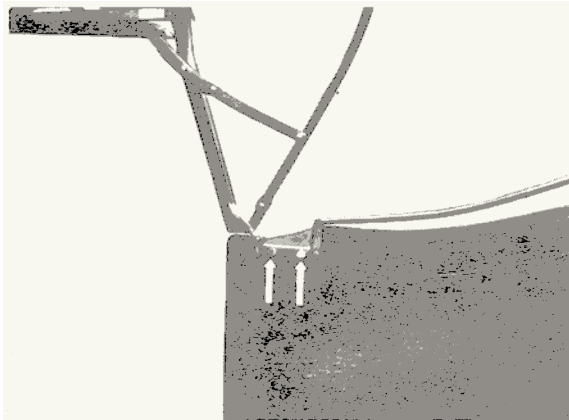


Fig. 70

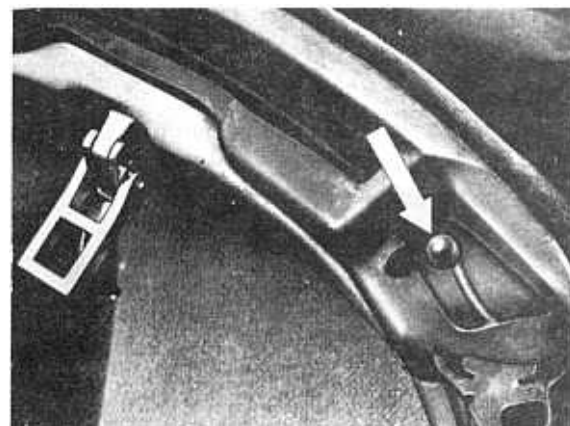


Fig. 71

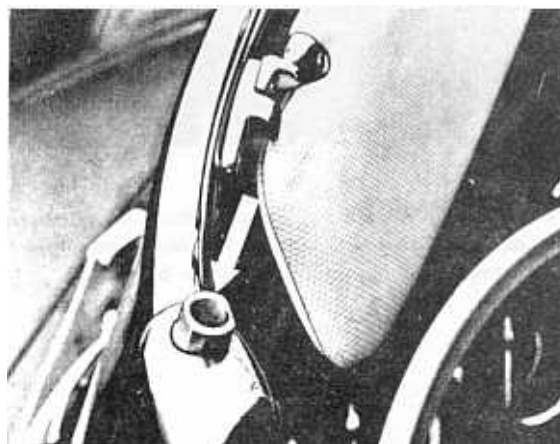


Fig. 72

1. Make sure that guide pins at front top frame align with bearing sockets of windshield frame posts (see fig. 71 and 72).
2. Check to see whether top is sealing perfectly at windshield and at door windows.